



BTPC-907DC

TABLET PC 9"-DUAL CORE-WIFI-ANDROID 4.2

Manual de Instrucciones

ÍNDICE

INSTRUCCIONES DE FUNCIONAMIENTO

- INTRODUCCIÓN
- LISTA DE APLICACIONES

CONFIGURACIÓN

- CONEXIONES INALÁMBRICAS Y REDES
- PANTALLA Y SONIDO
- APLICACIONES
- IDIOMA Y ENTRADA
- COPIA DE SEGURIDAD Y RESET
- FECHA Y HORA
- SOBRE EL DISPOSITIVO

REPRODUCTOR HD

 
MÚSICA

CÁMARA

NAVEGADOR

INSTRUCCIONES DE FUNCIONAMIENTO

INTRODUCCIÓN

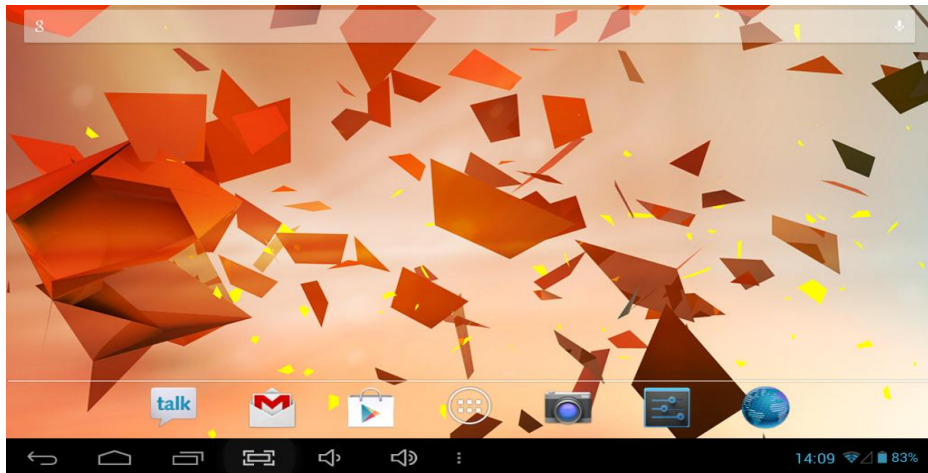

Volver



Inicio



En ejecución



Captura de pantalla



Volumen +/-



Menú Opciones



Menú de aplicaciones



Estado conexión USB



Entrada de voz



Hora / Señal WIFI / Señal 3G / Estado batería



Barra Google

 
LISTA DE APLICACIONES

Pulse en el icono de aplicaciones  para acceder al menú de aplicaciones:



Podrá cambiar el sitio de un aplicación manteniéndola pulsada y soltándola en el lugar deseado.


Haga clic en **WIDGETS** para acceder a los iconos de aplicaciones útiles:

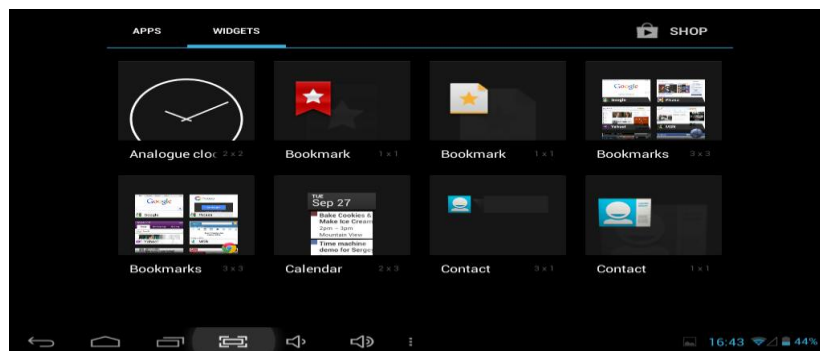


CONFIGURACIÓN


CONEXIONES INALÁMBRICAS Y REDES

  
Seleccione **Wi-Fi** para acceder al menú de WIFI:

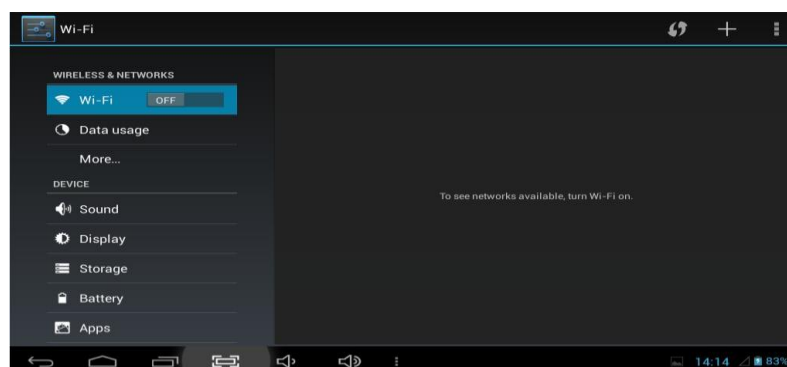

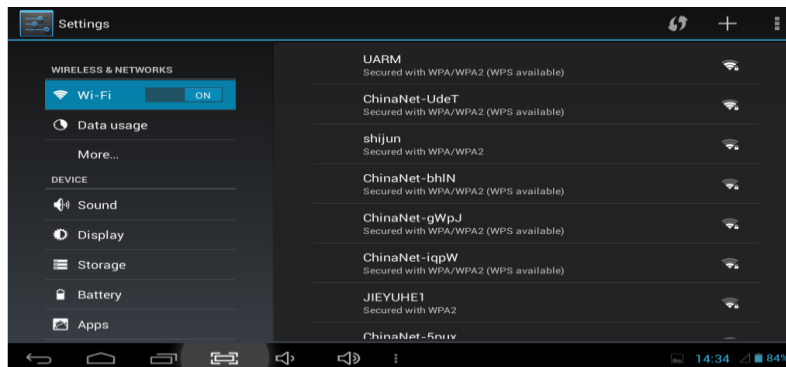


Active la función WiFi y el dispositivo comenzará a buscar redes WiFi automáticamente.

 
Cuando se muestre este icono  la red requerirá una contraseña, para ello aparecerá la siguiente ventana:

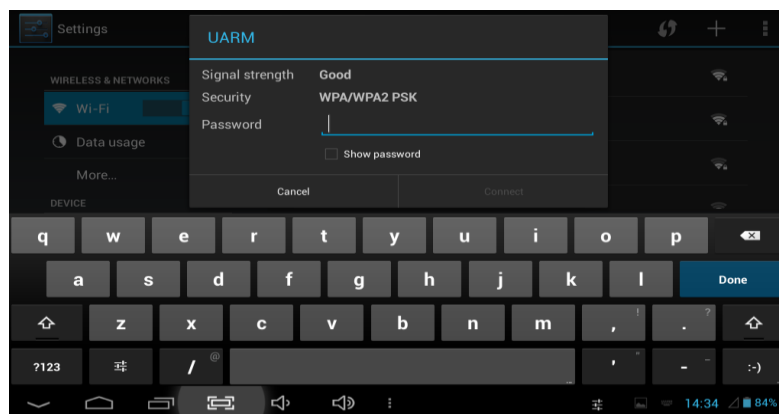

PANTALLA Y SONIDO

  
En el menú de configuración seleccione  **Sound** :

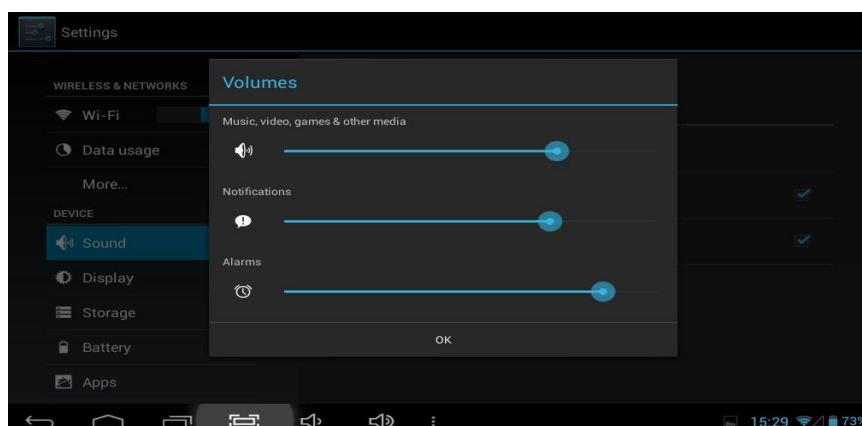

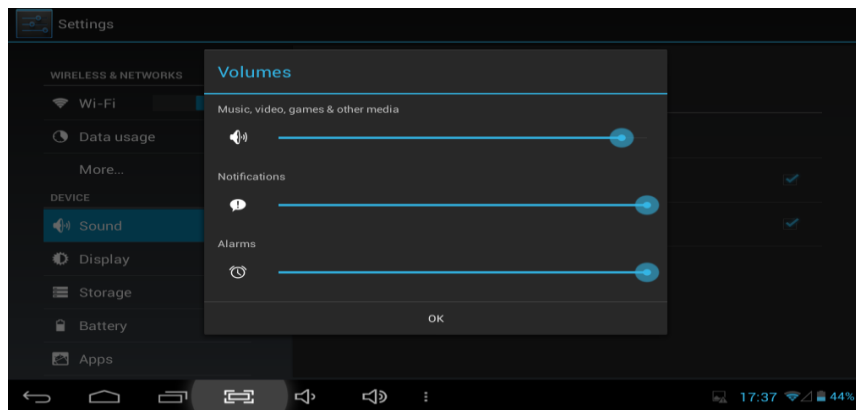

Podrá ajustar el volumen de determinados avisos y aplicaciones.

 En el menú de configuración seleccione PANTALLA:

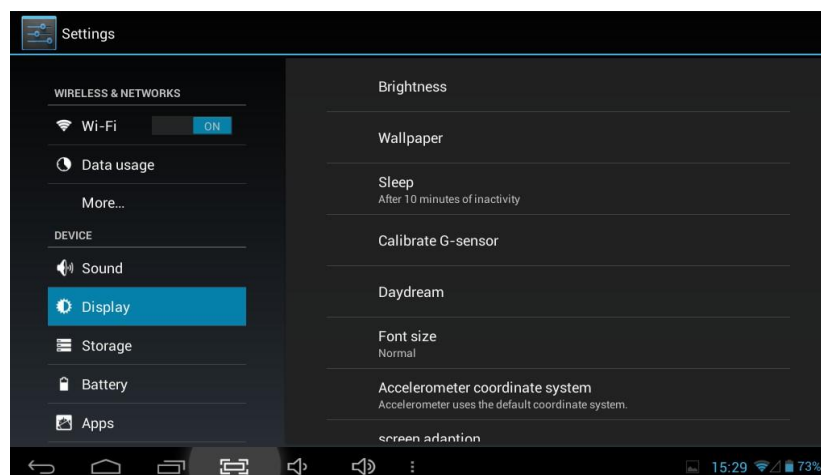

Brightness Brillo

Wallpaper Salva pantallas

Sleep
After 10 minutes of inactivity Función Sleep

Calibrate G-sensor Calibración


Daydream Apagado auto de pantalla

 
 
Font size
Normal Tamaño de fuente

Accelerometer coordinate system
Accelerometer uses the default coordinate system. Sietema coordinado de acelerómetro


screen adaption
Used to adjust size of some games display screen. Ajuste de pantalla para APK especiales


APLICACIONES

Gestión de aplicaciones: Haga clic en el icono  del menú de configuración para entrar en la configuración de aplicaciones:


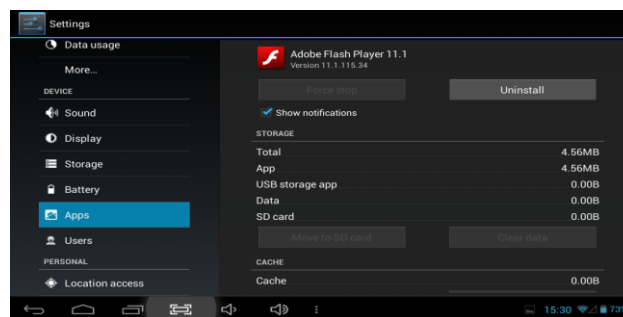
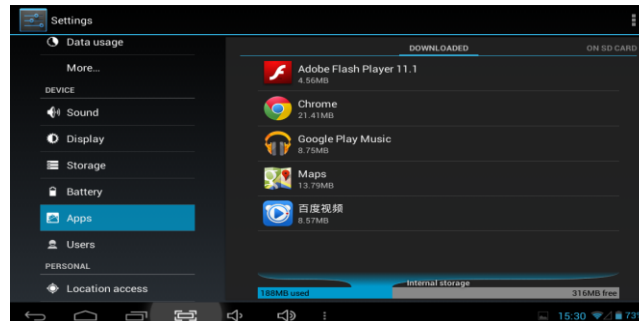




IDIOMA Y ENTRADA

  Haga clic en  para ajustar los valores de idioma y entrada de texto:

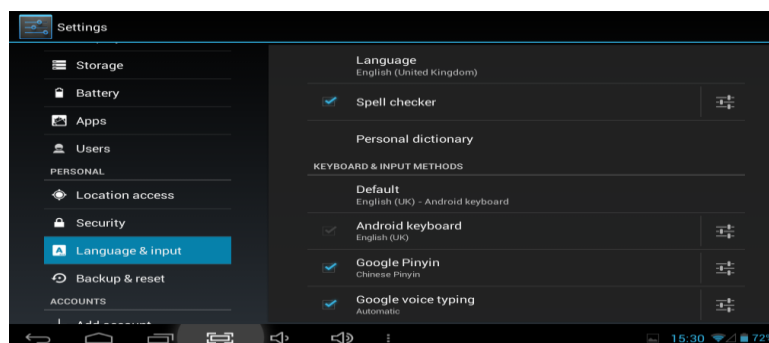

COPIA DE SEGURIDAD Y RESET

     
Seleccione  ,  ,  para configurar opciones de copia de seguridad y volver a los valores de fábrica:

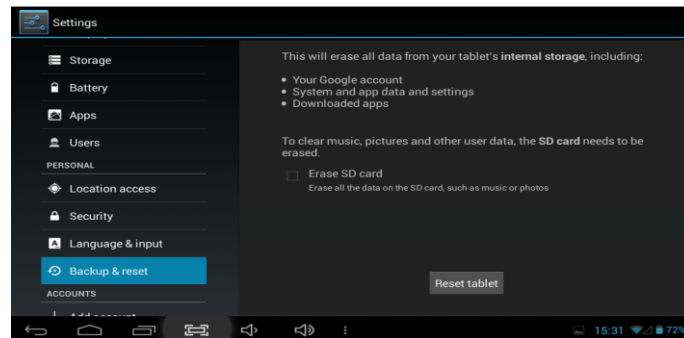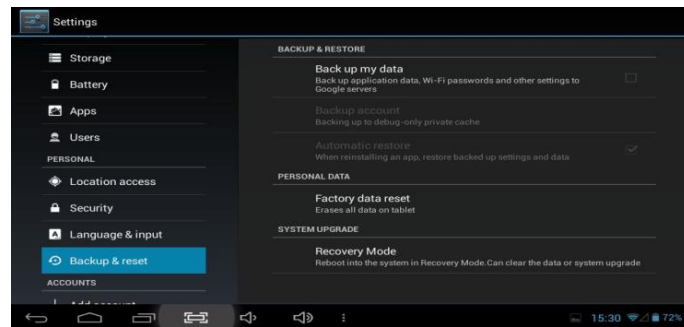

NOTA: Al efectuar la función RESET, todas las APK desaparecerán.

FECHA Y HORA

 Seleccione **Date & time** en el menú configuración para acceder a los ajustes de fecha y hora:

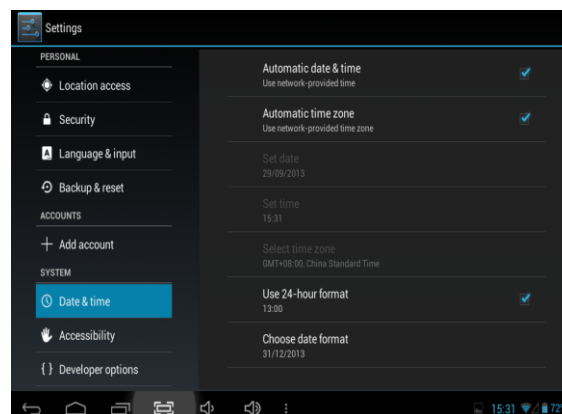

Automatic date & time
Use network-provided time

Fecha y hora automática

Automatic time zone
Use network-provided time zone

Zona automática

Set date
5/9/2012

Establecer la fecha actual

Set time
06:24

 
Establecer la hora actual

Select time zone
GMT+00:00, GMT+00:00

 
Establecer la zona

 
SOBRE EL DISPOSITIVO

Seleccione esta opción para obtener información acerca del dispositivo:

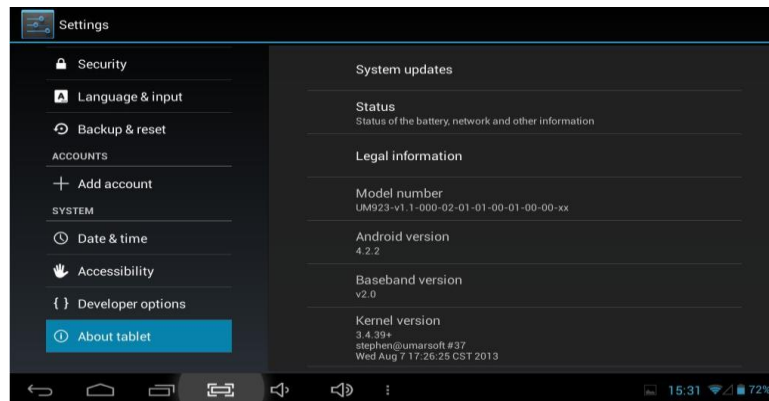
 


REPRODUCTOR HD

Seleccione el icono de reproductor de vídeo  y accederá a la galería:

 
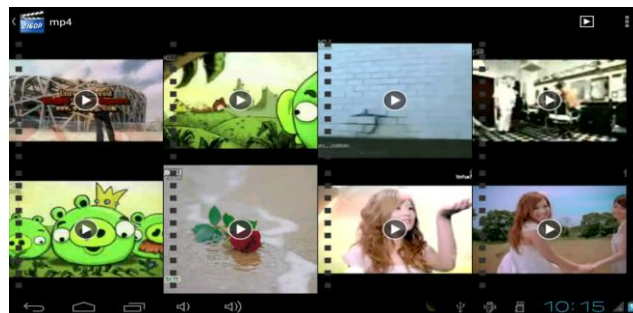 


Para funciones adicionales, mantenga pulsado el archivo elegido.

Para reproducir archivos almacenados en la tarjeta micro SD seleccione , **Storage**, **Enable media scanning on extsd** y .

MÚSICA


Seleccione el icono de música :

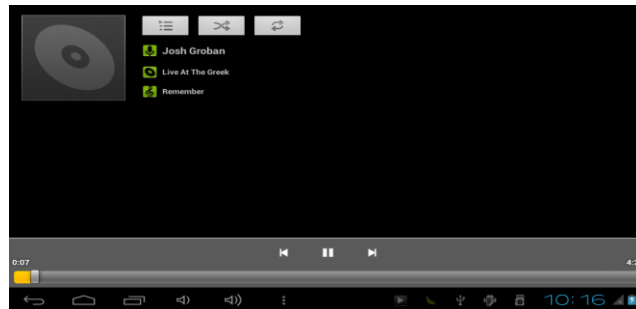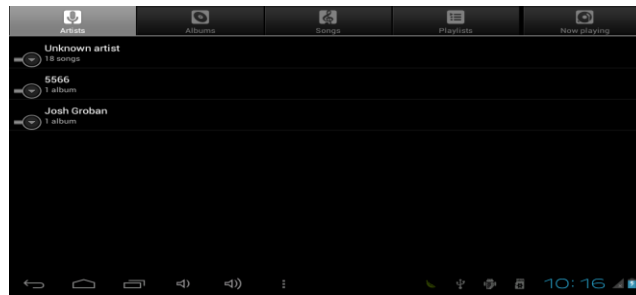

CÁMARA



 Seleccione el icono  para entrar en el modo de cámara:

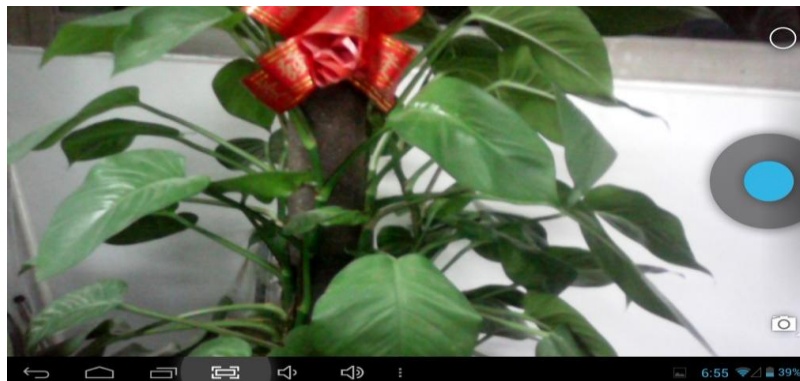

Para hacer una foto:



Seleccione la cámara de vídeo o fotos.



Pulse el icono de disparo.



Seleccione la cámara delantera o trasera.



Ajuste la exposición.



Menú de configuración de cámara

 


Modos

NAVEGADOR



Seleccione el icono para abrir el navegador:

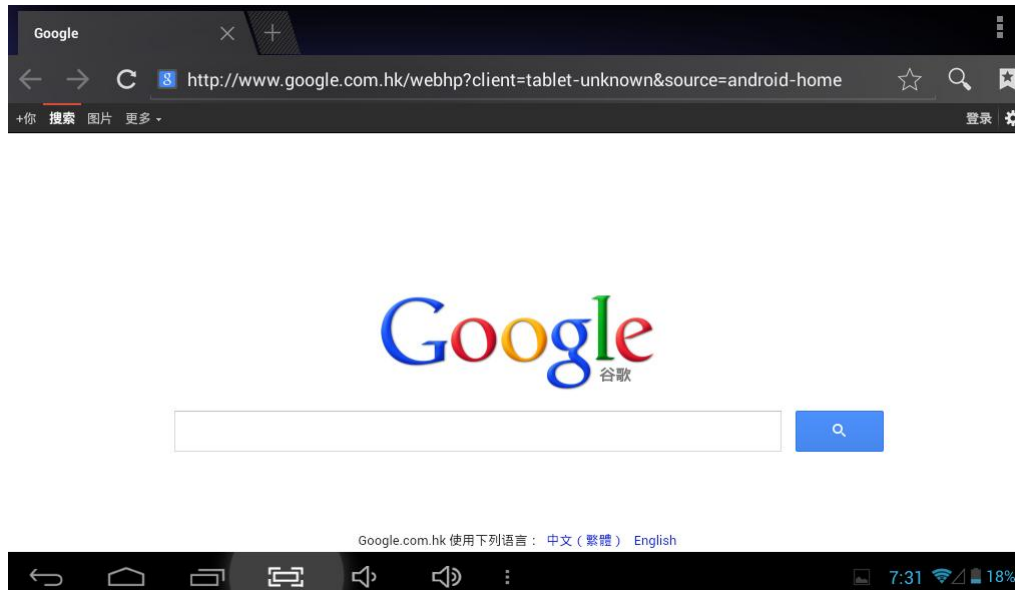

Para navegar debe tener conexión a internet.

"Las especificaciones pueden cambiar sin previo aviso"

IMPORTADO

I.R.P., S.L.

AVDA. SANTA CLARA DE CUBA 5

SEVILLA, SPAIN

BRIGMT 



DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

ETSI EN 301 489-1 V1.8.1 (2008)
ETSI EN 301 489-17 V2.1.1 (2009)
ETSI EN 300328 V1.7.1: 2006
EN 50371: 2002
EN60950-1:2006+A12: 2011

Descripción del aparato:

Modelo BRIGMTON **BTPC-907DC**
Dispositivo de conexión a internet

Importador: I.R.P., S.L.

Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.



BTPC-907DC

TABLET PC 9"-DUAL CORE-WIFI-ANDROID 4.2

Instruction Manual

OPERATING INSTRUCTIONS

- INTRODUCTION
- LIST OF APPLICATIONS

CONFIGURATION

- WIRELESS & NETWORKS
- SCREEN AND SOUND
- APPLICATIONS
- LANGUAGE AND ENTRY
- BACKUP AND RESET
- DATE AND TIME
- ON THE DEVICE

HD PLAYER

 
MUSIC

CAMERA

BROWSER

OPERATION INSTRUCTIONS

INTRODUCTION

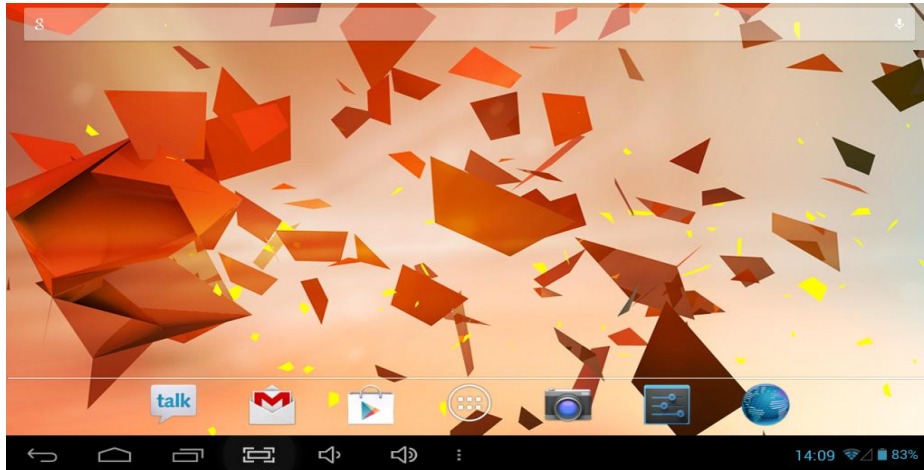

Return



Home



Running Program under background



Screenshot



Voice -



Voice +



Fast enter system settings and Manage apps



Application Menu



USB Connected



Voice input




Time / WIFI / External 3G dongle signal / Battery



Google search

 
APPLICATION LIST

Click  icon into applications menu:



Note: Long pressing an application icon can add shortcut to the desktop automatically

Click **WIDGETS** icon to view widgets:

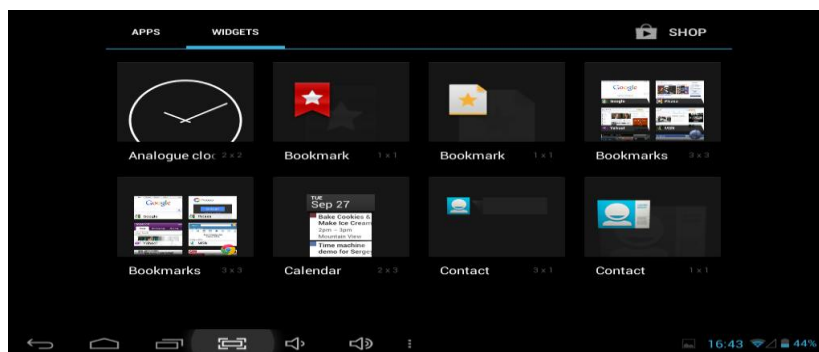



Note: Long pressing any widgets; you can create a shortcut on the desktop

SETTINGS

WIRELESS & NETWORKS

  
Click **Wi-Fi** icon, then select wireless & network:

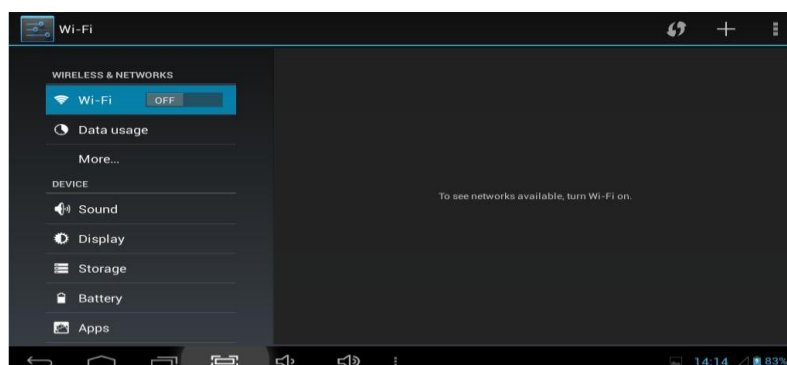


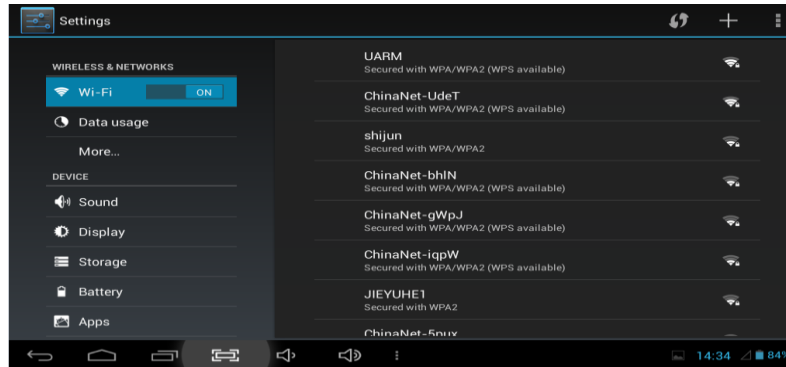

Wi-Fi settings


Turn on Wi-Fi, tablet can search for nearby Wi-Fi networks automatically and display related information. Choose WIFI router.

 
If it displays locked as , you need type password before connection:

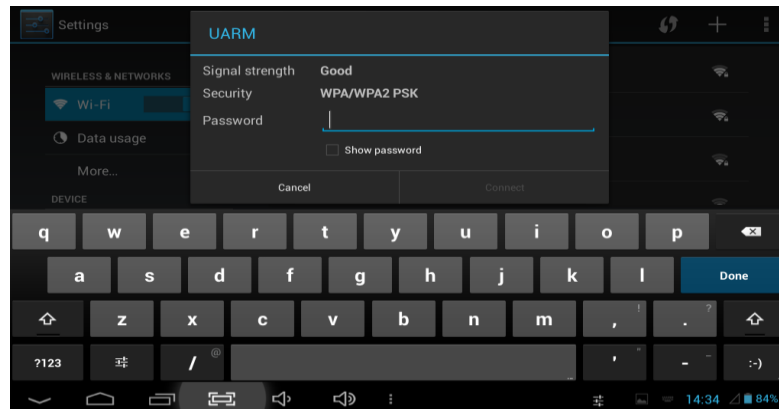


SOUND AND DISPLAY

  Click  **Sound** to set volume

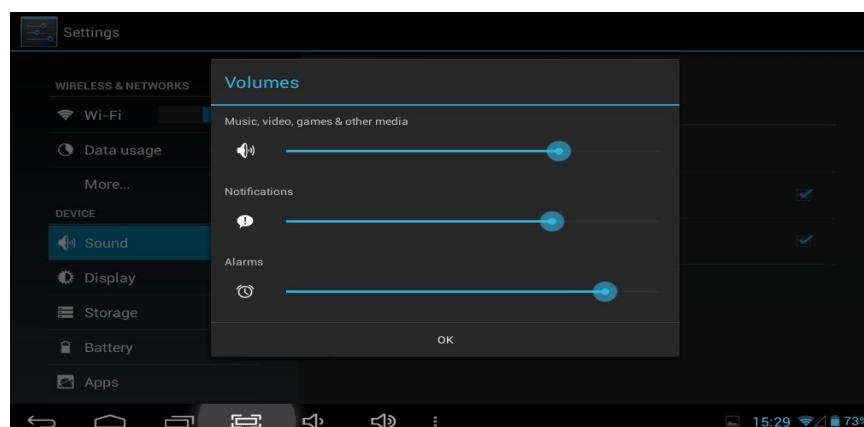

 Click  **Volumes** icon to adjust the volume

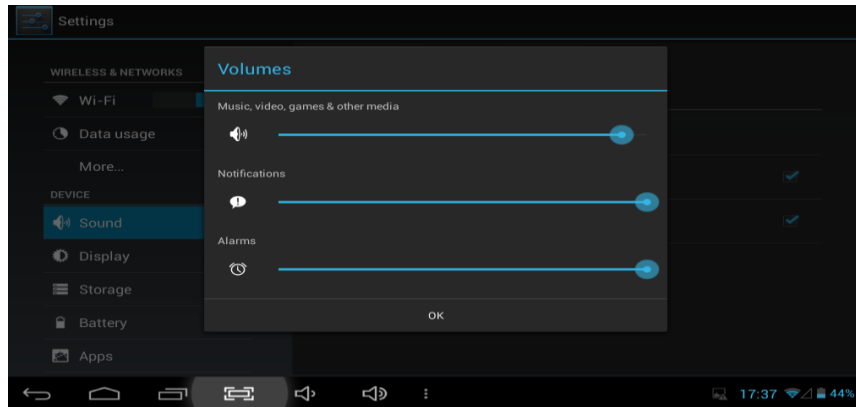

Brightness

LCD Brightness
setting

Wallpaper

Set wallpaper

Sleep
After 10 minutes of inactivity

Set sleep interval

Calibrate G-sensor

Calibrate

Daydream

Set screen protect

Font size
Normal

 
Adjust font size

Accelerometer coordinate system
Accelerometer uses the default coordinate system.


Select an
accelerometer
coordinate system

 
 
screen adaption
Used to adjust size of some games display screen.

Adjust screen
adaption

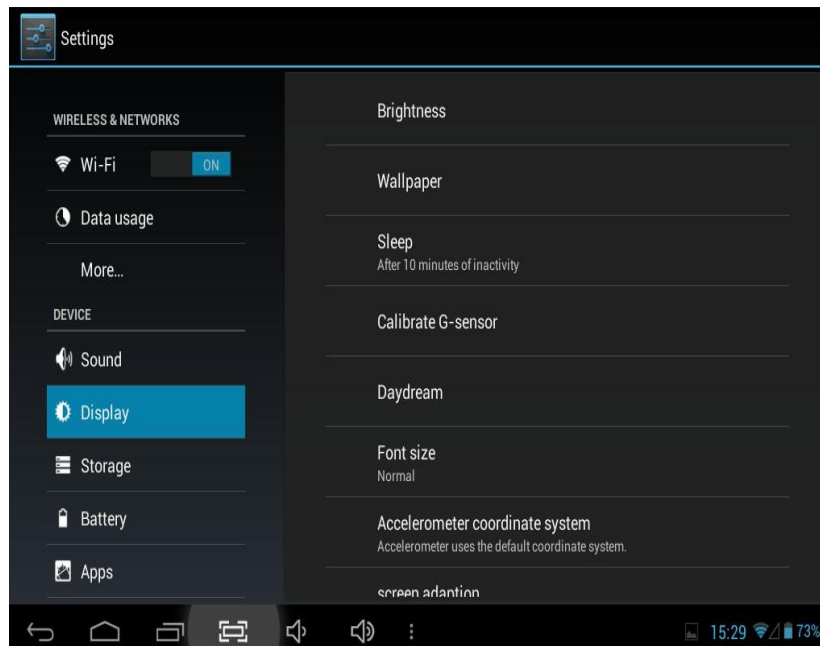


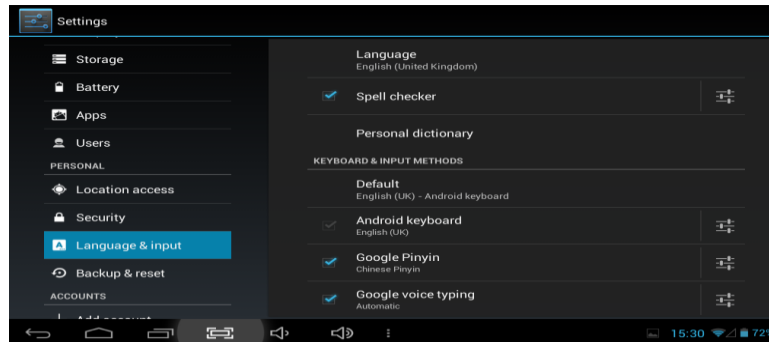 
APPS

Click  into application settings interface. You can see all application details and uninstall programs completely.

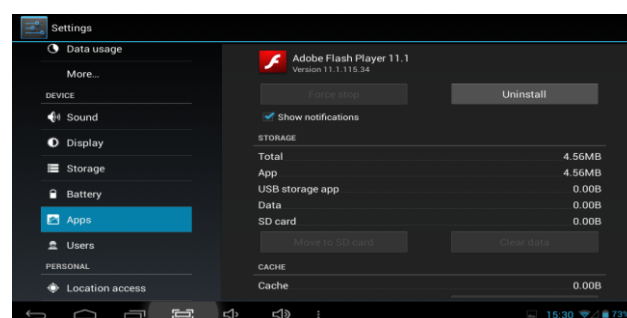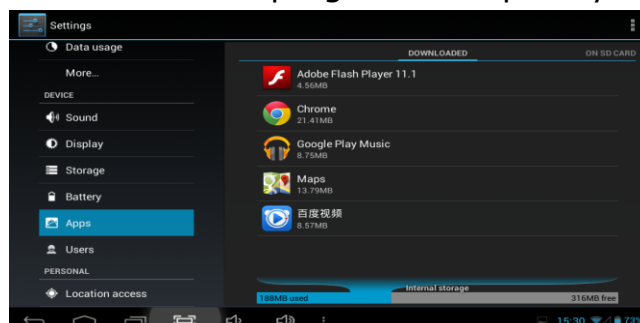

 
 
LANGUAGE & INPUT

Click  to set native language.



BACKUP & RESET


Click **Backup & reset** → **Factory data reset** Erases all data on tablet → **Reset tablet** icon to reset tablet:

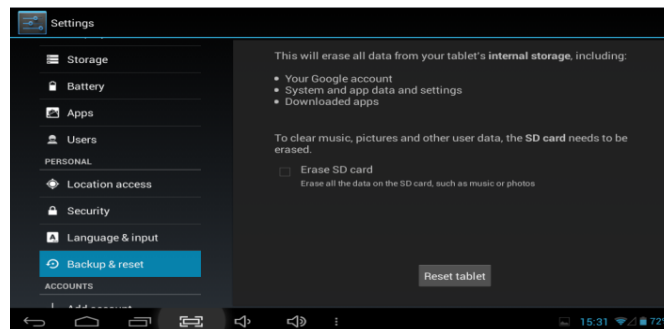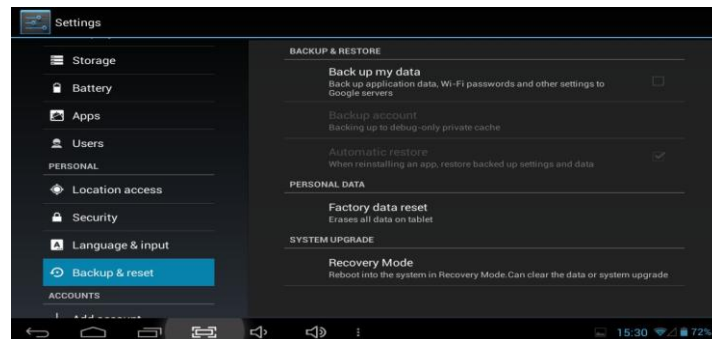

Note: All applications are installed by user will be disappeared.

DATE & TIME

 Click **Date & time** to set date and time:

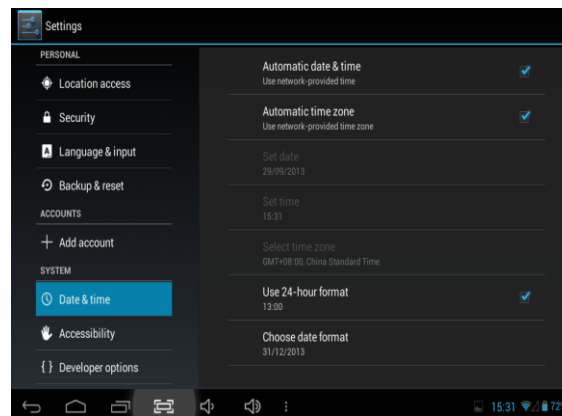

Automatic date & time
Use network-provided time

Obtain the time automatically

Automatic time zone
Use network-provided time zone

Obtain the time zone automatically

Set date
5/9/2012

Set current date

Set time
06:24

 
Set current time

Select time zone
GMT+00:00, GMT+00:00

Select time zone for your location

About tablet

You can check the Tablet detail information:

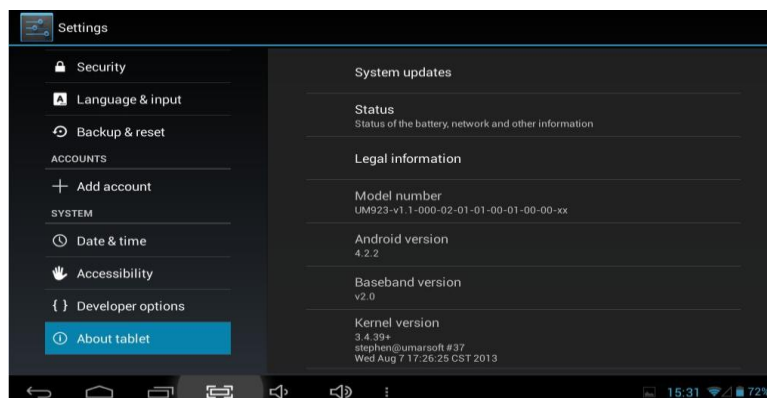

HD PLAYER



Click  icon to browse picture and video:




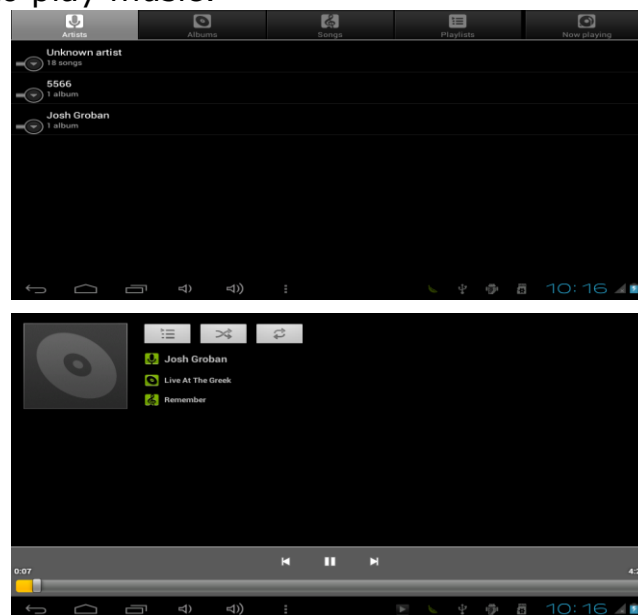 
Note: It needs some time to load all files at first time. Press one file 2S for more advanced operation.

If you want to browse the file from TF card, please make sure


Storage → **Enable media scanning on extsd** choose ☒.

 
MUSIC

Click  icon to play music:



CAMERAS

Click  icon into camera interface:

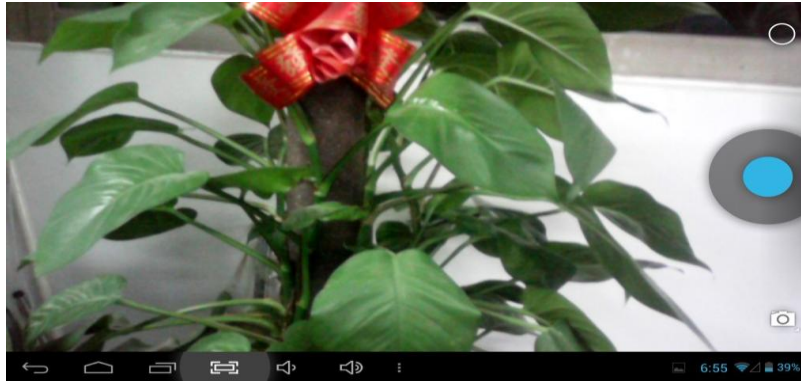

Take photo



Click this icon you would find



Small window



Switch camera/video recorder



Click this icon you would find



Switch front and rear

camera



Exposure



Camera setting

 


Different mode


BROWSER



Click icon to browse web page:



Google
谷歌

 

Make sure the internet is connected.

"Features can change without notice"

Imported: I.R.P., S.L.
Avda. Santa Clara de Cuba 5
41007 Sevilla
Spain



DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

ETSI EN 301 489-1 V1.9.2 (2011)
ETSI EN 301 489-17 V2.1.1 (2009)
ETSI EN 300328 V1.7.1: 2006
EN 62479: 2010
EN60950-1:2006+A11:2009+A1:2010+A12: 2011

Description of apparatus:

BRIGMTON Model **BTPC-907DC**
Mobile Internet Device

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.